
APP Smart Life Instructions
Mobilní aplikace Smart Life pokyny
Mobilná aplikácia Smart Life pokyny

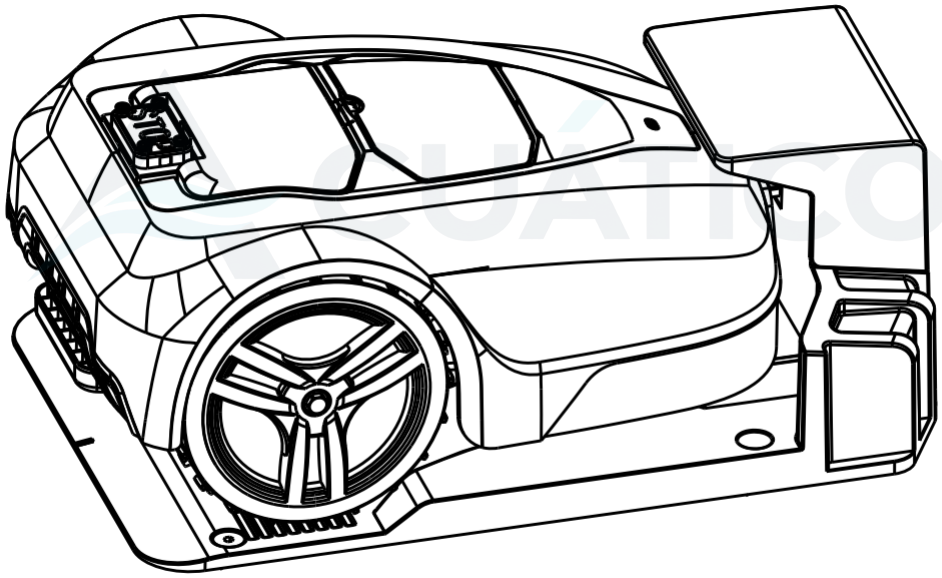

2021/11

EN/CZ/SK

Mountfield a.s.
Mirošovická 697
CZ 251 64 Mnichovice

APP SMART LIFE EN

1. APP DOWNLOAD AND INSTALLATION

The robot mower can be remotely controlled via the mobile phone APP.

Please follow the instructions below or refer to the product guide in the APP interface.

1.1. APP Download and Installation

Please scan QR Code below to download and install APP.

APP Download QR Code

Smart Life APP Icon


2. ACTIVATE WI-FI MODE ON THE MOWER

2.1. Please ensure your garden is in strong Wi-Fi signal range.

2.2. Power on the mower.

2.3. Setting --> Wi-Fi Setting --> Press 'OK' --> Update Success.

2.4. Confirm Wi-Fi indicator light is now rapidly flashing.

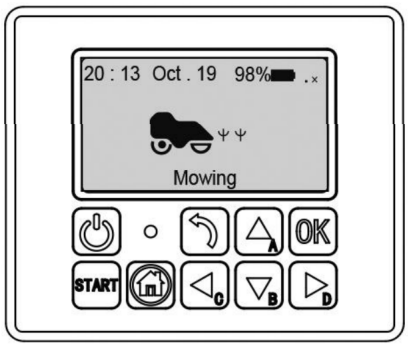

Wi-Fi Indicator Light:

Wi-Fi connecting standby:

LED light blinking.

Wi-Fi connecting successfully:


LED light keeps on for 2 minutes then light off.

Wi-Fi connecting unsuccessfully:

LED light keeps blinking for 3 minutes then light off.


3. ADD DEVICE

Open app and add device like below images

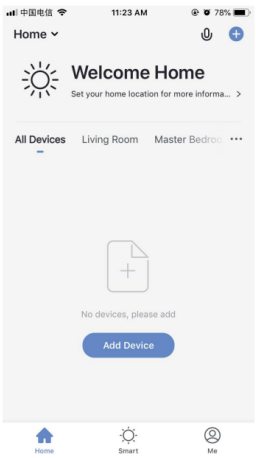


Step 1 & Step 2

Open Smart Life APP, sign up and login; Then choose to add device.

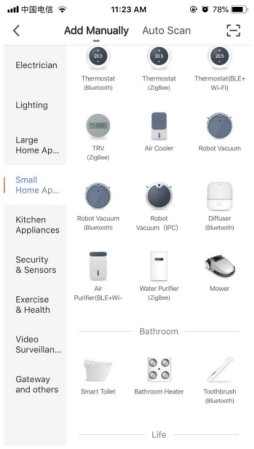


Step 3

Find “Small Home Appliances”, then on this category to find “Mower”.

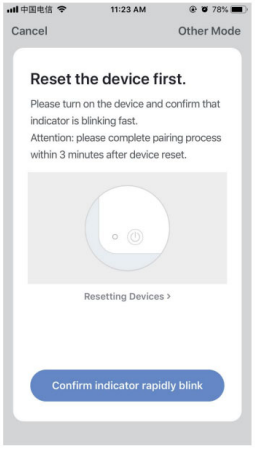


Step 4

Ensure the Wi-Fi indicator light is now rapidly blinking.

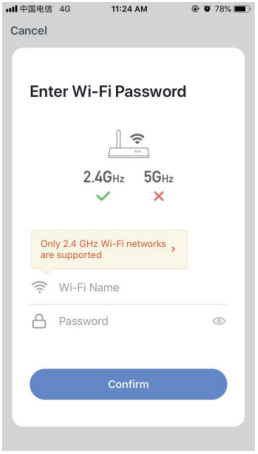


Step 5

Enter Wi-Fi password according to current Wi-Fi.

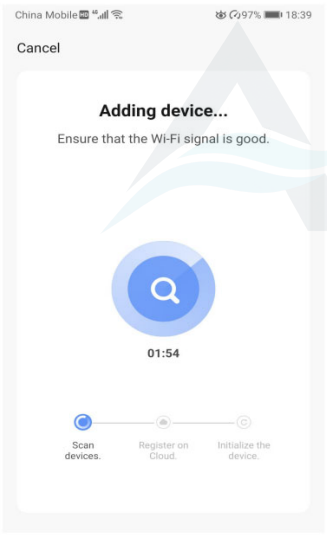


Step 6

Connecting.

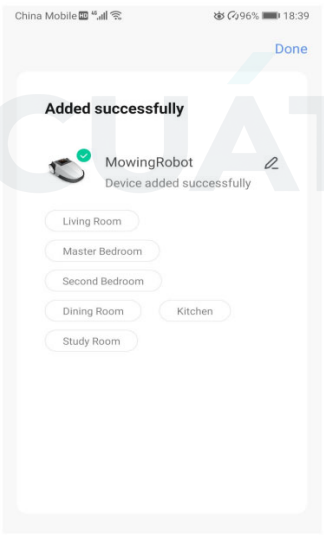

Step 7

Mower connects successfully.

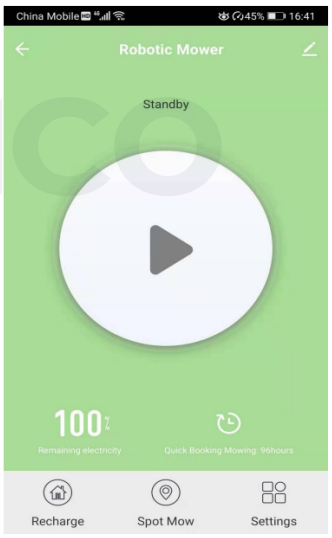

Step 8

After successful connection, you will enter operation interface.

4. INTRODUCTION OF APP FUNCTION

4.1. Start / Pause Mowing

Under standby or mowing status, press ‘Start/ Pause’ button to start/ pause the mowing job.




Sart



Pause

4.2. Cancel Mowing

Cancel the current mowing job under Paused status, then switch to Standby status.

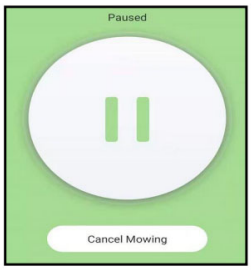

Cancel mowing

4.3. Recharge

Under standby status, press ‘Recharge’ button to return mower to dock station. Under recharging status, press ‘Recharge’ button can stop the recharging job.



4.4. Spot Mow

Under standby status, press ‘Spot Mow’ button to start the spot mow function. Under spot mow status, press ‘Spot Mow’ button can stop this job.



4.5. Quick Appointment


Under standby status, press ‘Quick Appointment’ to set the working time of the mower needs to work.





4.6. Booking Mowing

Under standby status, enter interface by Settings --> Booking Mowing, then the working time can be set.

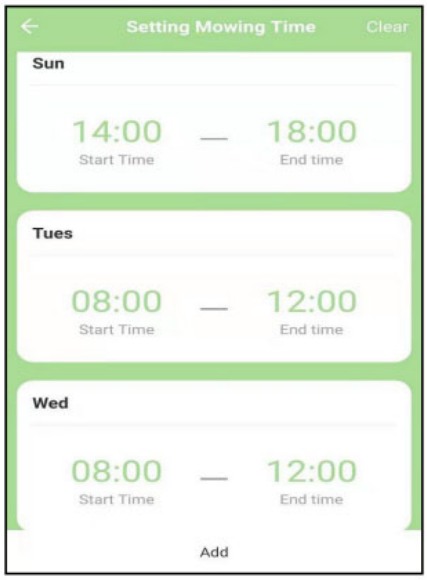


4.7. Zone Mowing

Under standby status, enter interface by Settings --> Zone Mowing, then use the zone mowing function by setting the zone parameters including length and ratio.

Notice:

1) The distance refers to how far the mower will go along the boundary wire before entering into the yard. The percentage refers to how often the mower will start mowing from each zone.

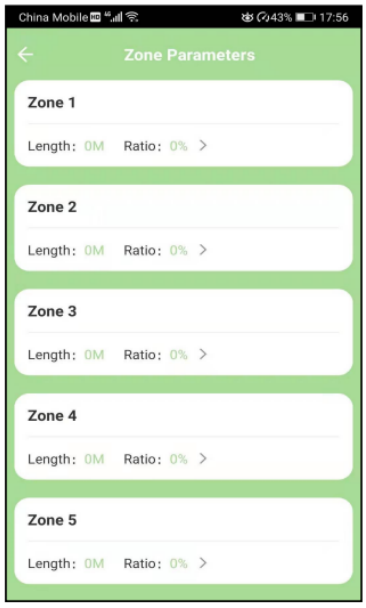

2) The value of distance should be 0-200 m, while the percentage should be 0-100 %. The sum of percentage of each zone should be 100 %. Or the setting cannot be completed.